

How to use the Water Tanker Filling Station

Before filling, make sure your card is loaded with sufficient volume (credit) as the station will stop supplying water once the card reaches 0m³

To START the filling station



Step 1


Open the small black lid and place the card facing upward as shown in the picture. This will open the big grey lid for connection of the hose pipe, and activate the unit. The screen will display the volume of water on card.



Step 2

Connect/attach the hose pipe with the unit as shown.

The connection fitting type on the unit is:
Instantaneous (BS336).

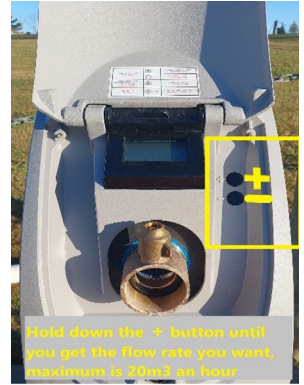

Hold down the + button until you get the flow rate you want, maximum is 20m³ an hour.

Step 3

Press the buttons on the right with signs:
⊕ to start and ⊖ to stop the water flow.
(Hold down the ⊕ button until you get the flow rate you want - max 20m³ p/h)

To STOP the filling station

Once your tanker is full or the required amount is reached, hold down the ⊖ button, until the flow stops or remove the card from the unit. Remove your hose pipe connection.

The volume of water taken will be deducted off your card as the tanker fills.

Please ensure your tanker hoses are in good condition to avoid wasting water through leaks.

Please report any issues with the operation of the unit to Waitaki District Council on: 03 433 0300 or service@waitaki.govt.nz



Waitaki
DISTRICT COUNCIL
TE KAUNIHERA A ROHE O WAITAKI



Palmerston Water Tanker Filling Station

**33 Gilligan Street, Palmerston
(next to the Palmerston Sports Hall)**

